




1. Launch F-950_Package_Setup32.exe (or F-950_Package_Setup64.exe, under Windows 64 bit)
2. Set up device as prompted message below, then click OK

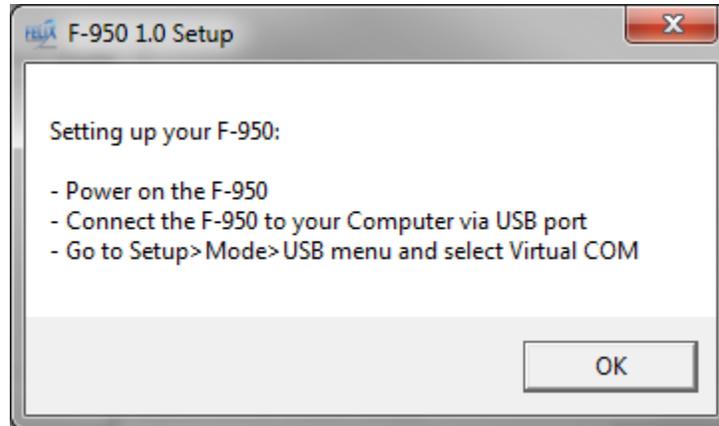


3. Install will prompt for DfuSe tool (requires for firmware upgrade)

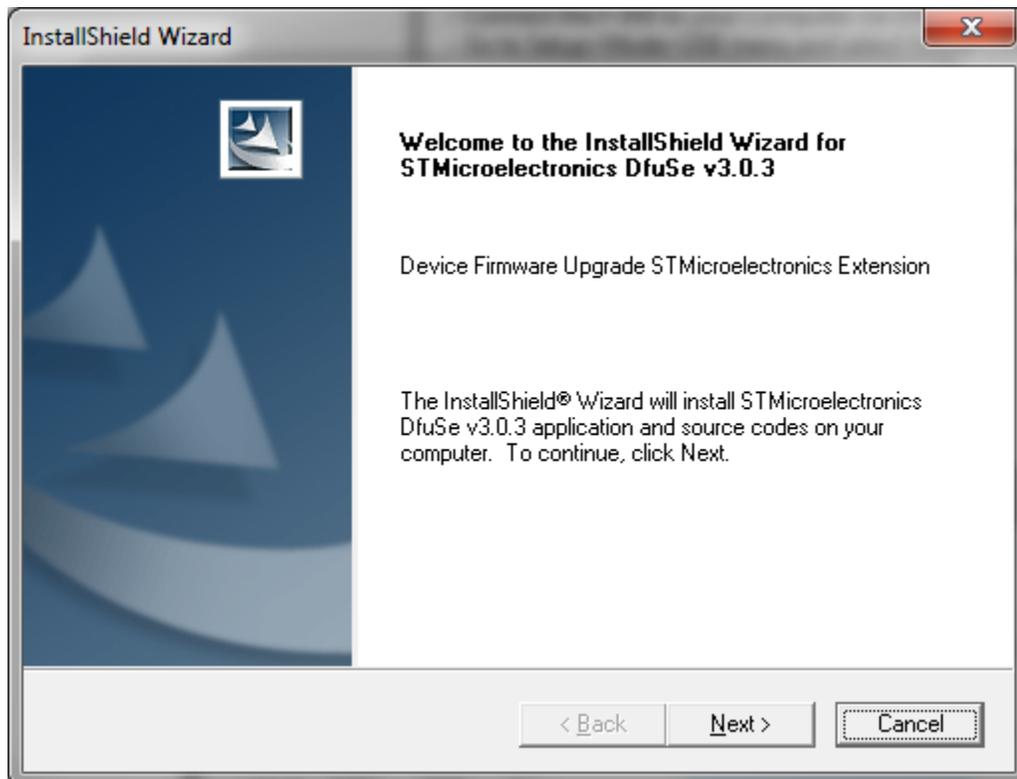


Click Next then enter your information into the window below. Click next in the next several steps.

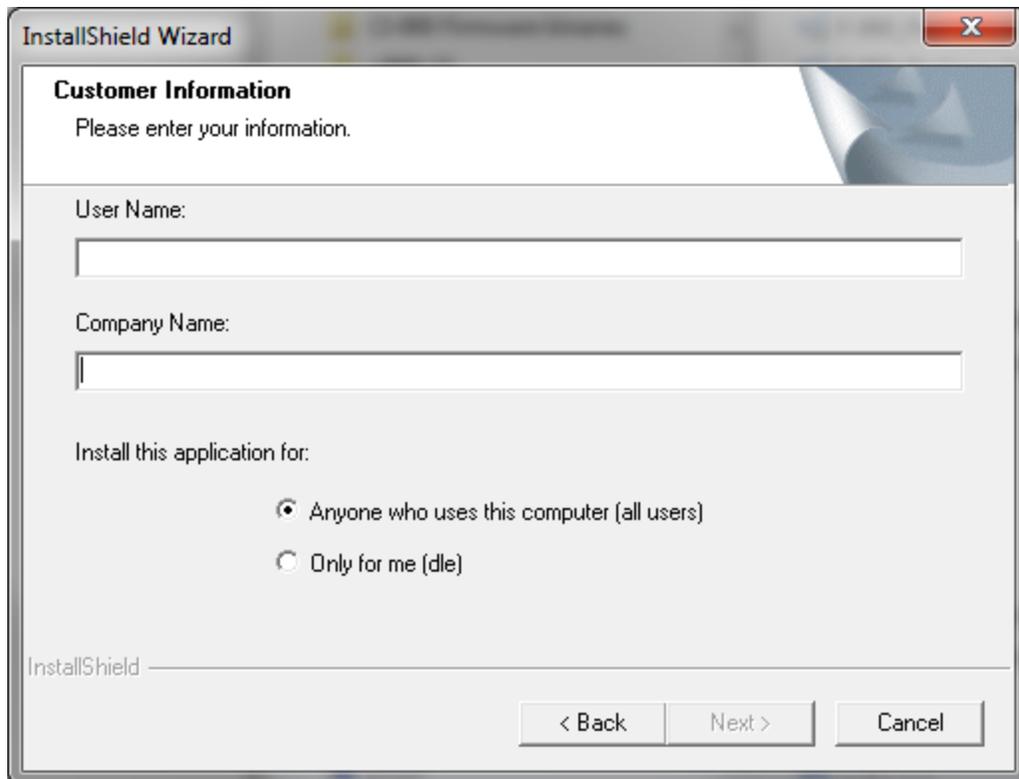

4. The Installer will proceed to the Virtual COM driver. Click Next in the next several windows.

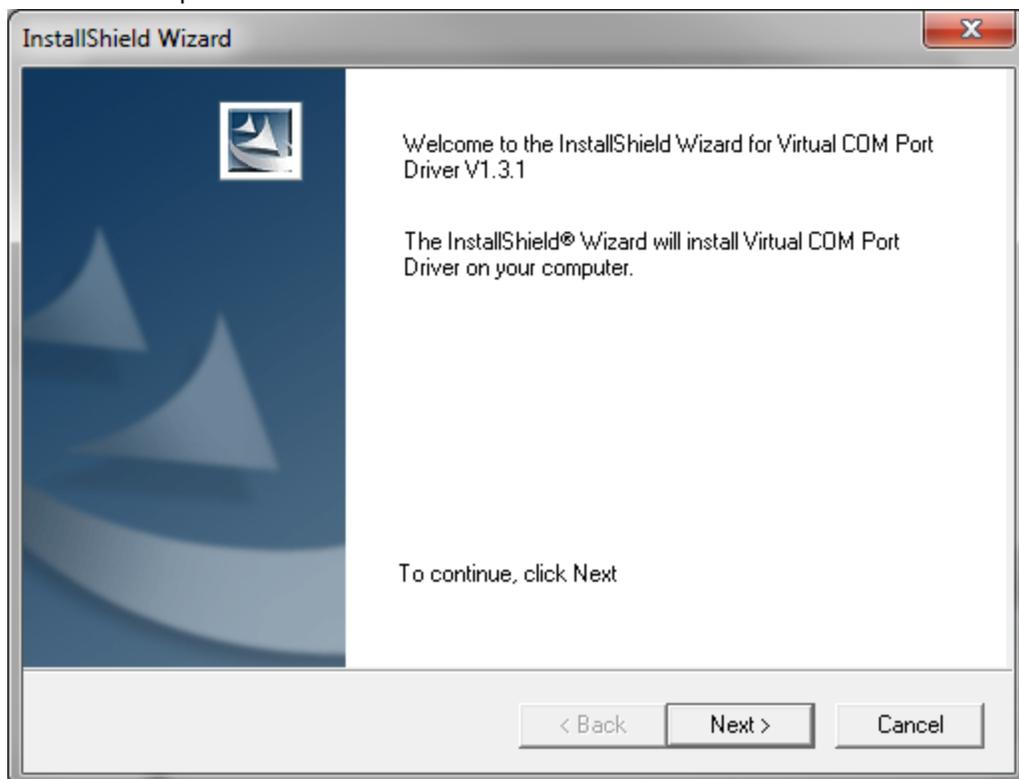

If Windows prompts the following message, select "Install this driver software anyway":

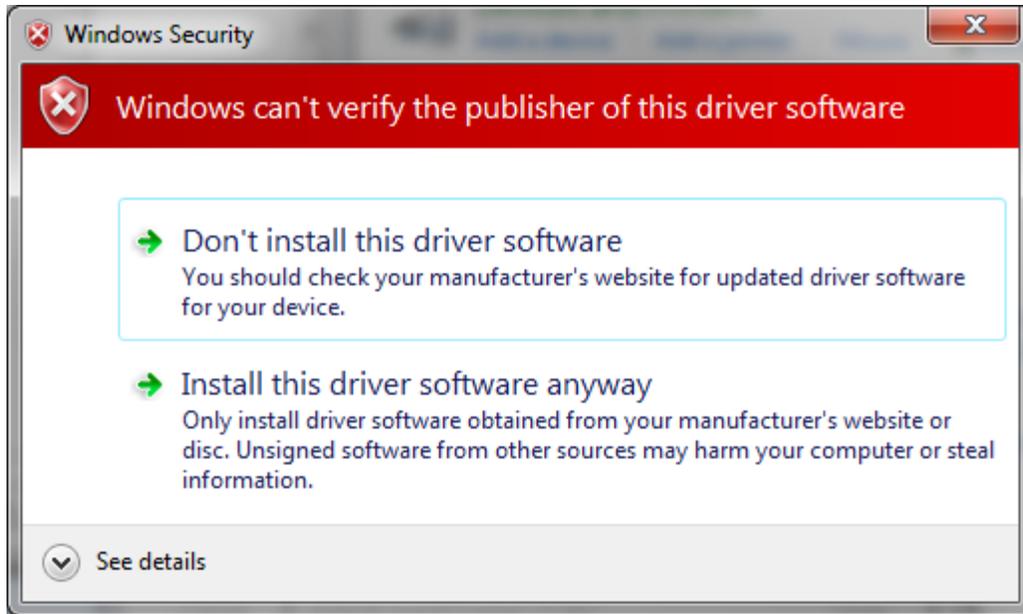

5. Device drivers and Software package installation is completed. Under Windows's Start menu, you should be able to find shortcuts for Device's Controller and Firmware Upgrade Program.